

Toe Panel / Kick Plate Instructions


Home Appliances

Internal | Department | 10/11/2007 | © Robert Bosch Hausgeräte GmbH, Munich reserves all rights even in the event of industrial property rights.
We reserve all rights of disposal such as copying and passing on to third parties..



BOSCH

Remove the kick plate from the back of the dishwashers (everything else should stay hanging behind the dishwasher on the yellow hanger)

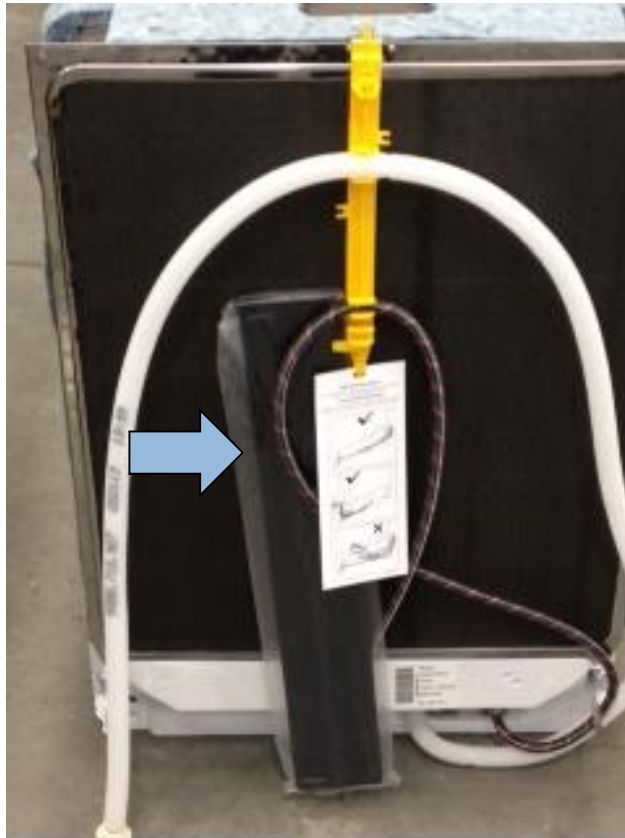

Home Appliances


2

Internal | Department | 10/11/2007 | © Robert Bosch Hausgeräte GmbH, Munich reserves all rights even in the event of industrial property rights.
We reserve all rights of disposal such as copying and passing on to third parties..



BOSCH

Notice where holes are on base. Place the kick plate over the base and screw into the holes. The mounted kick plate should look like the second picture.

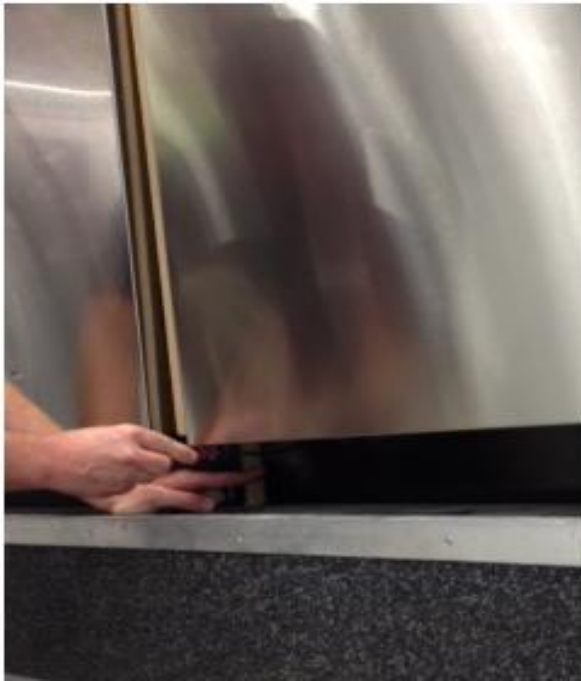

Home Appliances


3

Internal | Department | 10/11/2007 | © Robert Bosch Hausgeräte GmbH, Munich reserves all rights even in the event of industrial property rights.
We reserve all rights of disposal such as copying and passing on to third parties..



BOSCH

Kick Plate Installation

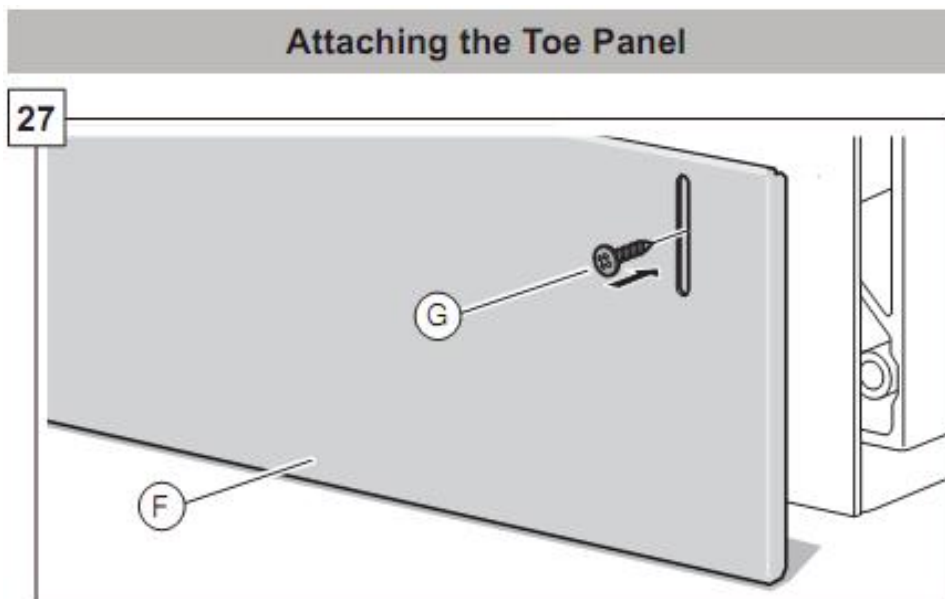

If your dishwasher came with a slotted toe panel (F) follow these instructions; otherwise skip to 28 now.

Position the slotted toe panel (F) on the dishwasher. Allow it to rest on the floor.

Attach using screws (G) as shown. Use only the supplied screws to avoid damaging the dishwasher. The toe panel should be flush with the floor. Your installation is complete!



BOSCH