

# Monthly Update: Training Center



**BOSCH**  
Invented for life

## Bosch Wall Oven & Slide-in Range Cooking Modes...

### Bake

Cooking with dry, heated air. Both the upper and lower elements cycle to maintain the oven temperature

**Temp:** 100 to 550 degrees

**Tip:** For best results, bake food on a single rack with at least 1 ½" space between pans and oven walls



### Convection Bake

Similar to Bake, it uses both the upper and lower element. Heat is also circulated throughout the oven by the convection fan

**Temp:** 100 to 550 degrees

**Tip:** Reduce recipe temperature by 25 degrees if Auto Convection Conversion is not turned on



### Convection Multi-Rack

Cooks with heat from a third element behind the back wall of the oven. The heat is circulated throughout the oven by the convection fan

**Temp:** 100 to 550 degrees

**Tip:** Well suited for cooking individual serving-sized foods such as cookies and biscuits



### Pizza

Heat from the upper and lower element is circulated throughout the cavity by the convection fan

**Temp:** 100 to 550 degrees

**Tip:** Use the pizza mode for fresh or frozen pizza. For a crispy crust, place the pizza directly on the rack. For a softer crust, use a pizza pan



### Roast

Uses both the upper and lower elements with a more intense heat from the upper element than the lower element. Best suited for meat, poultry and less tender cuts of meat

**Temp:** 100 to 550 degrees

**Tip:** Preheating the oven is not necessary. A high-sided broil pan or roasting pan is recommended



### Convection Roast

Heat from the upper and lower element is circulated throughout the cavity by the convection fan. Ideal for cooking tender cuts of meat and poultry and roasting vegetables

**Temp:** 100 to 550 degrees

**Tip:** Reduces cooking time by up to 25%. Do not cover the meat or use cooking bags



### Broil

Uses intense heat radiated from the upper element. Creates a fast and efficient way to cook without the addition of fats & liquids

**Temp:** Low: 450 High: 550

**Tip:** Ideal for tender cuts of meat (1" or less), poultry and fish. Can also be used to brown breads and casseroles



### Convection Broil

Uses intense heat radiated from the upper element that is circulated by the convection fan. Cook without the addition of fats & liquids

**Temp:** Low: 450 High: 550

**Tip:** Ideal for thick cuts of meat, poultry and fish. Not recommended for browning breads and casseroles



### Proof

Uses the upper and lower elements to maintain a low temperature to proof bread or other yeast doughs

**Temp:** 85 to 125 degrees

**Tip:** Keep the door closed and use the oven light to check on the rising of the dough



### Warm

Upper and lower elements maintain a low temperature in the oven in order to keep food at serving temperature

**Temp:** Low: 150 to 225 degrees

**Tip:** Do not use this mode to warm cold food or warm food for over 1 hour



\*Cooking modes vary by product and series. Please consult product details for specific information.

For any additional questions on wall oven modes, please contact our product specialists through our sales support website: [www.askboschsears.com](http://www.askboschsears.com) Live Chat: Mon-Fri 8:30AM to 6:00PM EST  
Outside of chat hours? Submit a question and receive a response within 24 Hours.

## Monthly Update: Training Center

sears



**BOSCH**  
Invented for life

### Additional Wall Oven Features....

#### Auto Convection Conversion

Decreases the oven temperature set by 25 degrees for Convection Bake and Convection Multi-Rack cooking modes. Allows the user to use convection cooking without having to adjust the temperature of their recipes.

**Note:** This feature is turned off out the factory and must be turned on by the user

#### Fast Preheat

\*Available on 800 Series Wall Ovens

Uses a combination off all 3 heating elements to heat the oven quicker than standard preheat. Available for Bake, Roast, Convection Multi-Rack, Convection Bake, Convection Roast and Pizza

#### Delay Cook

Allows the oven to be programmed to finish a timed cooking mode at a predetermined time.

**Note:** Can only be set from Standby mode or while a cooking mode is running

#### Meat Probe

Measures the internal temperature of the food. The probe is available for Bake, Roast and all convection cooking modes except Convection Broil



\*Available on 800 Series Wall Ovens

#### How to use it:

1. Insert the probe into the thickest part of the meat or poultry. Make sure it isn't touching fat, bone or pan
2. Connect the probe to the oven.
3. Set the cooking mode and temperature
4. Type in the desired probe temp and hit enter
5. Once the internal temperature has reached the set temperature, the cooking mode will turn off

**Step your customer up to savings by helping them save 10%, via a Visa gift card, when they purchase 3 or more Bosch appliances!**



All Gas Slide-In  
HGI8054UC  
(48523)



Bar Handle  
Dishwasher  
SHX68T55UC  
(16833)



Over The Range  
Microwave  
HMV8052U  
(47673)



Counter-Depth  
French Door  
B22CT80SNS  
(99473)

**Save Your Customer up to \$680 on this Bosch Kitchen Package!  
Offer good, Now thru April 26<sup>th</sup>, 2015**

For information on current rebates, visit the promotions & rebates tab on the [askboschsears.com](http://askboschsears.com) website