


## New 300/500/800 Bosch Dishwasher Installation - Overview

## New Improvements for faster, safer, and more secure Installations



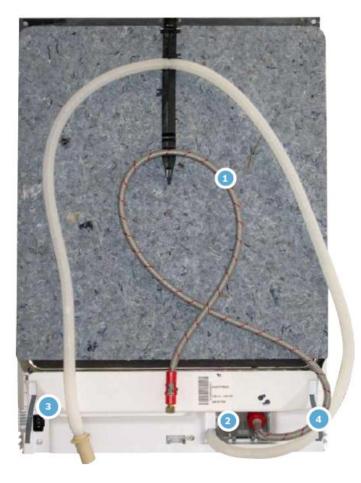

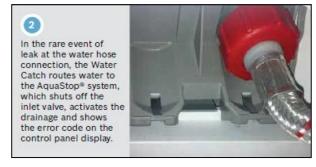

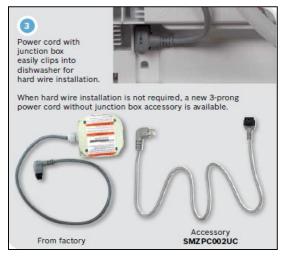



#### Home Appliances - For Internal Use Only - Do Not Distribute



#### **New Bosch Dishwasher Installation – Guidance with POP**


#### Important Information


Route the hoses through the left or right hand side traps.


Refer installation guide for details.

#### L'information importante

Conduisez les tuyeux par la bande de côté geuche ou droit. Référez-vous le guide d'installation pour des details.

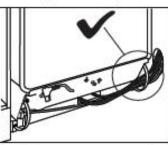

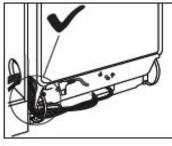

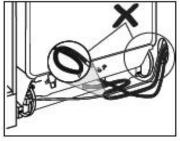

Factory applied installation pop will be included on the back of the new units






#### Free 'Quick-Install Kit' included:

- 1. Pre-connected braided water inlet hose
- 2. Pre-connected drain hose
- 3. Flexible connection for hard wiring\*
- \* When installing to an outlet connection, a 3-prong power cord is available for purchase (#SMZPC002UC).



## **New Dishwasher Electrical Installation Options**

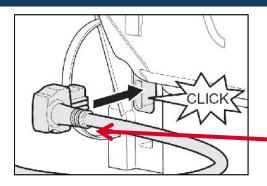

Bosch dishwashers (300,500, 800 series) now have new electrical installation options.

New – a proprietary connector plug in the rear for a safe and quick installation.

#### Option #1: Hardwire


- Power cord with junction box shipped with the appliance
- This installation type is valid for ~70 % of installations in North America



Supplied with appliance

#### Option #2: 3-prong receptacle plug

- Accessory 3-prong plug power cord kit available for purchase (SMZPC002UC) Sears Item # 16027
- The recommended power cord to be used when installing a unit to an electrical receptacle
- Electrical and plumbing codes vary across North America. The installing party has the responsibility of ensuring that the dishwasher installation is in compliance with all national and local electrical and plumbing codes and ordinances.

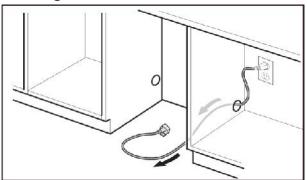



Home Appliances - For Internal Use Only - Do Not Distribute







## **Installation Option #1: Hardwire**


Hardwire Electrical supply conductors shall be a minimum #14 AWG copper wire rated at 167°F or higher

Connect wires to junction box terminal block and securely tighten the terminal block screws

Plug the end of the power cord into the back of the dishwasher as shown until it clicks

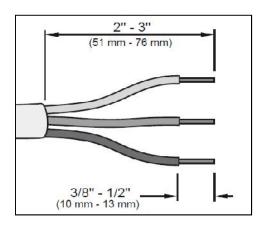

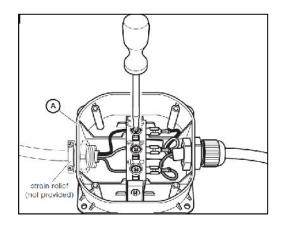

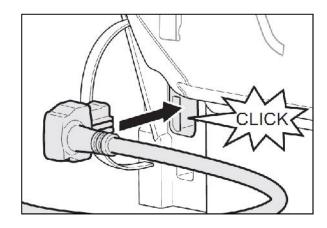


The dishwasher is designed for an electrical supply of 120V, 60 Hz, AC, connected to a dishwasher-dedicated, properly grounded electrical circuit with a fuse or breaker rated for 15 amps.



## **Installation Option #2: 3-prong receptacle plug**

- Accessory 3-prong plug power cord kit available for purchase
- The recommended power cord to be used when installing a unit to an electrical receptacle
- Electrical and plumbing codes vary across North America. The installing party has the responsibility of ensuring that the dishwasher installation is in compliance with all national and local electrical and plumbing codes and ordinances.
- Applicable for
  - Bosch: 300/500/800 Series

Sears Item # 22 - 16027 Model #SMZPC002UC

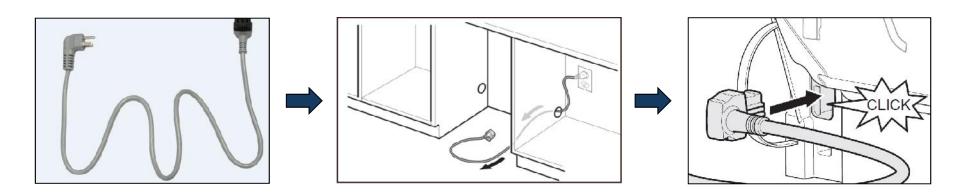



#### **Bosch Dishwasher Ascenta Installation**

#### **Ascenta Models Only:**



# Sears Item # 22 - 16017 Model #SGZPC001UC 61" Dishwasher 3-Prong Power Cord

- Current and new Ascenta models utilize this cord
- Power cord is to be wired directly to the dishwasher

